


## Manual Release Instructions for FAAC 422 drive system.

### Manual Operation

Methods of locking the gates	Choose type of locking	Follow instructions
Hydraulic locking		1,2,3 to release 6,7 to return to automatic.
Electric locking		1,2,3,4 to release 6,7 to return to automatic.
Magnetic locking		1,2,3,5 to release -6,7 to return to automatic.

### Swing Gates, with rams:

1. Turn off mains power in the control cabinet.
2. Slide back keyhole cover. Insert **VIRO** key into keyhole, turn anti-clockwise one turn. Remove key. Slide back keyhole cover. The ram is now in manual.
3. If you have a pair of gates repeat to both sides.
4. If you have an electric lock use the numbered VIRO key to release the lock [either side if barrels fitted both sides]. Push open the gate[s] whilst turning the key.
5. If you have a magnetic lock this will release as soon as the power is turned off.
6. To return to automatic operation, insert key and turn clockwise until resistance is felt, turnkey back slightly and remove. Slide back keyway cover. Repeat to both sides if you have a pair of gates.
7. Turn on mains power. Operate gates with any form of control device for 1 cycle.

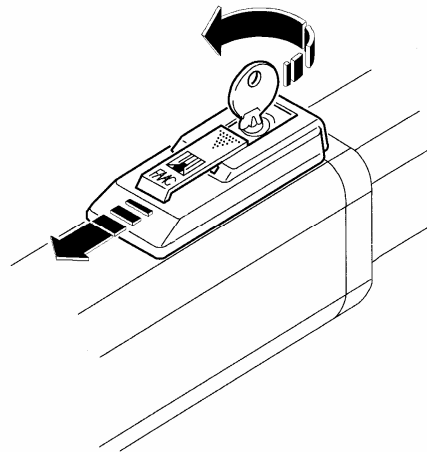

In the event of a problem please call our office for assistance.

Keep your system keys and release instructions in a known place and inform other staff of their location.